MONTERING AV VÄGGFÄSTE FÖR DECO M5 / M1300 - SWEDISH

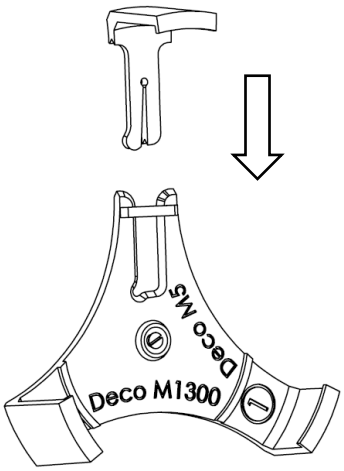

- Lokalisera den lösa ” grip-klon” och placera den som på bilden ovan. Skjut sedan in fäst-klon i motsvarande spår i väggfästet.

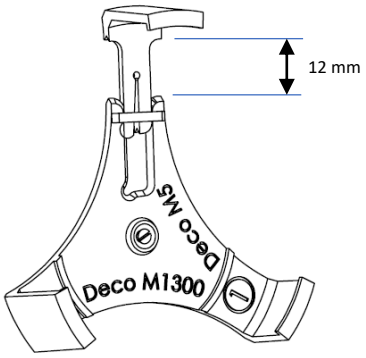

- Gripklon skjuts in tills den sticker ut ca. 12mm utanför väggfästet som bilden ovan.

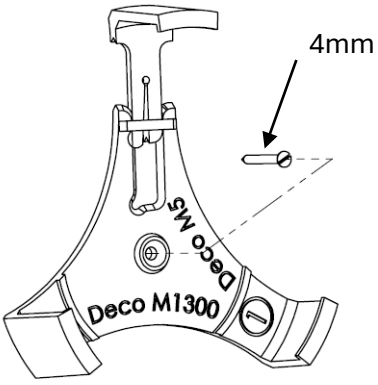

- Skruva nu fast väggfästet med gripklon uppåt och **i öppet läge** med 1 st. 4 mm skruv. Använd plugg om så krävs.

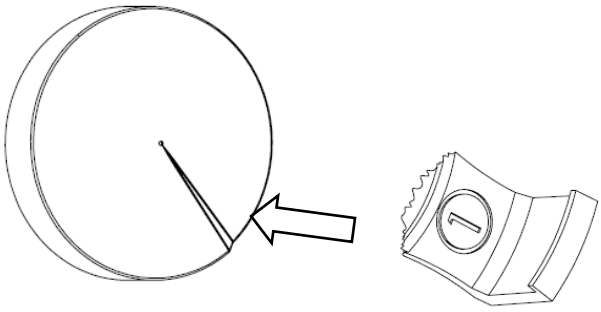

- Passa in deco-enhetens lägsta punkt (se pilen ovan) mot märkningen (1) på väggfästet.

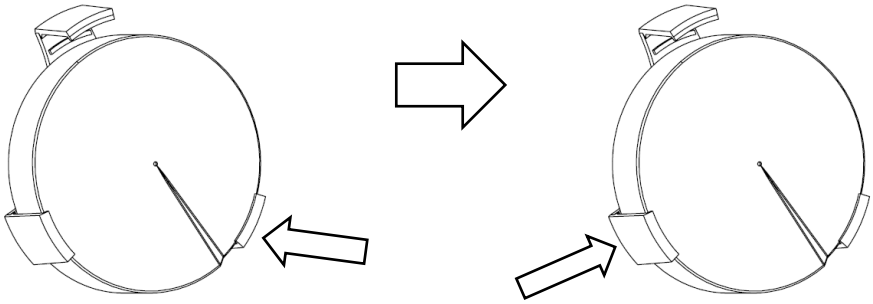

- Tryck den delen av deco-enheten mot väggfästet så att gripklon griper tag på ovansidan av deco-enheten.

- Gör på samma sätt för den andra nedre gripklon. Försäkra dig om att de båda nedre klorna nu griper om Deco-enhetens ovansida.

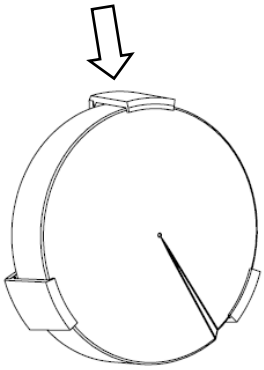

- Säkra nu väggfästet genom att trycka in den 3:e övre gripklon tills den ligger helt an mot Deco-enhetens sida.
- Nu är det klart och Deco-enheten är monterad.

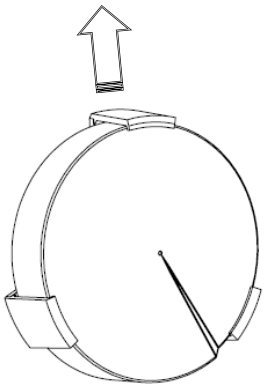

- Fästet kan öppnas vid behov genom att försiktigt dra ut den övre gripklon. Håll i nederdelen på fäst-klon.

Tips från experten
Placera din Deco-enhet så högt upp på väggen som möjligt, ju högre desto bättre. Du får då en bättre spridning på WiFi-signalen och den kan nå längre och till fler rum i bostaden.

Lycka till!

www.teknik-hjälpen.se

Teknik-hjälpen.se

Vi hjälper privatpersoner med hemelektroniken

MONTERING AV VÄGGFÄSTE FÖR DECO M9 - SWEDISH

- Börja med att skruva fast väggfästet **i öppet läge** med 1 st. 4 mm skruv. Placera den öppningsbara delen (märkt Deco M9) uppåt som på bilden. Använd plugg om så krävs.

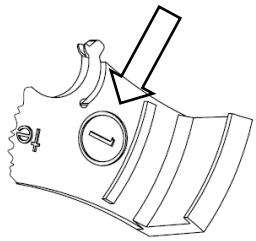

- Idetifiera den del på väggfästet som är märkt med med siffran (1)

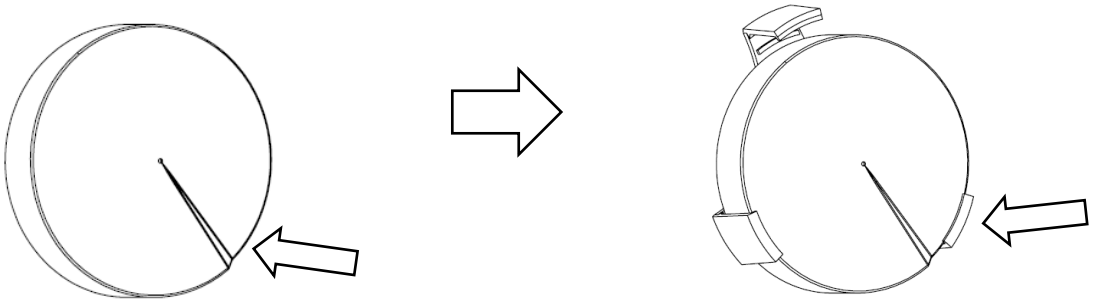

- Passa in deco-enhetens lägsta punkt (se pilen ovan) mot märkningen (1) på väggfästet.

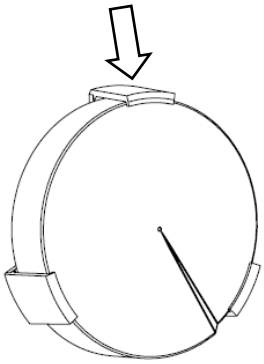

- Stäng nu väggfästet genom att trycka in den 3:e gripklon tills det hörs ett ”KLICK”.
- Nu är det klart och Deco-enheten är monterad.

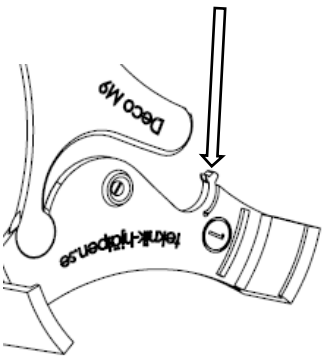

- Fästet kan öppnas vid behov genom att trycka med en smal skruvmejsel på tappen enl. bilden ovan. Sväng därefter ut den rörliga gripklon.

Tips från experten

Placera din Deco-enhet så högt upp på väggen som möjligt, ju högre desto bättre. Du får då en bättre spridning på WiFi-signalen och den kan nå längre och till fler rum i bostaden.

Teknik-hjälpen.se
Vi hjälper privatpersoner med hemelektroniken

ASSEMBLY OF WALL MOUNT DECO M5 / M1300 - ENGLISH

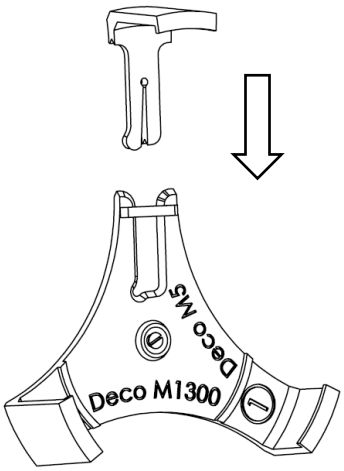

- Locate the loose “locking tab” and position it as shown in the image above. Then slide the locking tab into the corresponding groove in the wall bracket.

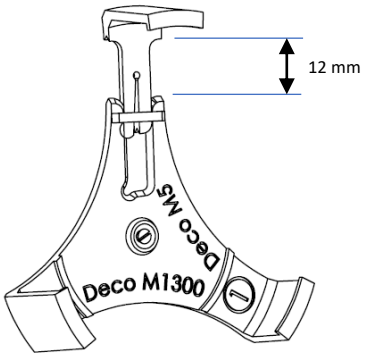

- Slide the locking tab in until it protrudes approximately 12 mm from the wall bracket, as shown in the image above.

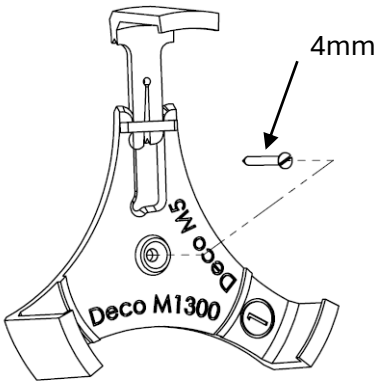

- Now fasten the wall bracket with the locking tab facing upward and in the open position using one 4 mm screw. Use a wall plug if required.

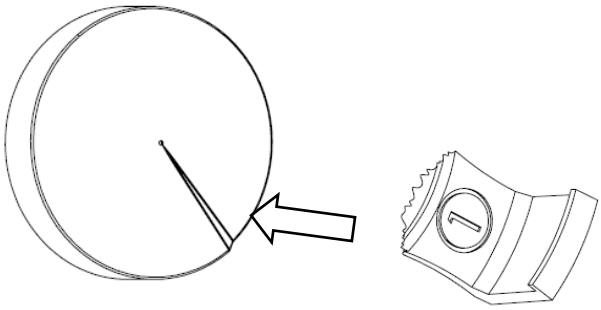

- Align the lowest point of the Deco unit (see the arrow above) with the marking (1) on the wall bracket.

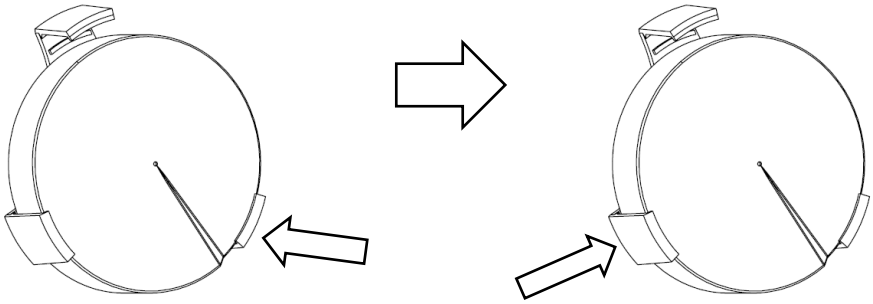

- Press that part of the Deco unit against the wall bracket so that the locking tab grips the top side of the Deco unit.
- Repeat the same procedure for the second lower locking tab. Make sure that both lower locking tabs are now gripping the top side of the Deco unit.

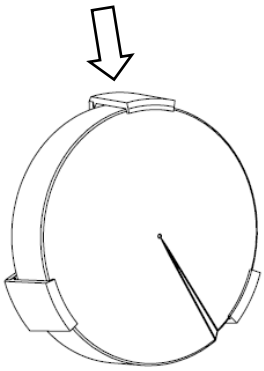

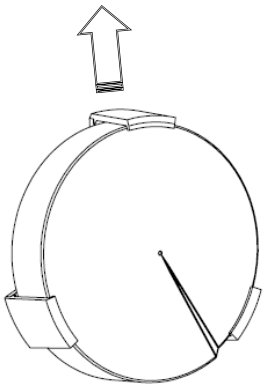

- Secure the wall bracket by pressing in the third, upper locking tab until it sits flush against the side of the Deco unit.
- Installation is now complete and the Deco unit is mounted.
- If needed, the bracket can be opened by carefully pulling out the upper locking tab. Hold the lower part of the locking tab while doing so.

A note from the expert
Place your Deco unit as high up on the wall as possible, the higher the better. You then get a better spread of the WiFi signal and it can reach further and to more rooms in your home.

Good luck!

Teknik-hjälpen.se

Vi hjälper privatpersoner med hemelektroniken

ASSEMBLY OF WALL MOUNT DECO M9 - ENGLISH

- Start by fastening the wall mount in the **open position** using one 4 mm screw. Position the hinged part (marked *Deco M9*) facing upwards as shown in the picture.
- Do not tighten the screws too tightly as the wall bracket may be damaged

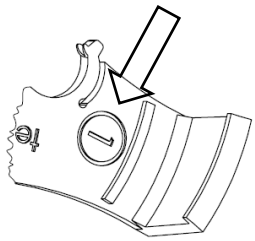

- Identify the part on the wall bracket that is marked with the number (1)

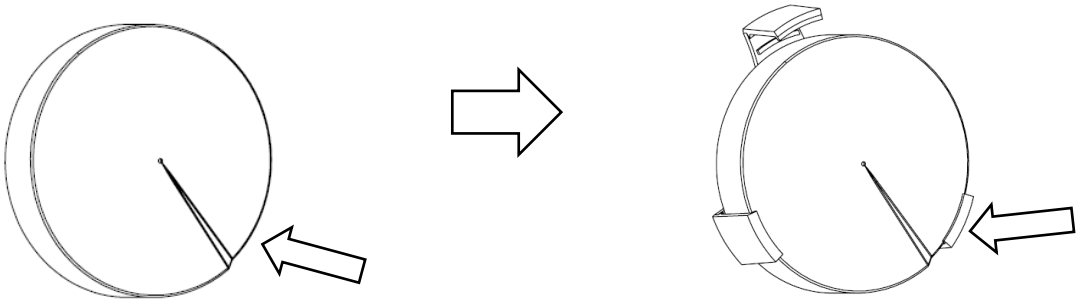

- Align the deco unit's lowest point (see arrow above) with the marking (1) on the wall bracket.

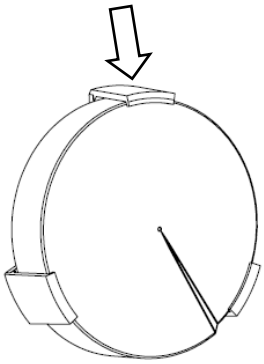

- Now close the wall mount by pressing in the third locking tab until you hear a “CLICK.”
- • You're all set — the Deco unit is now mounted.

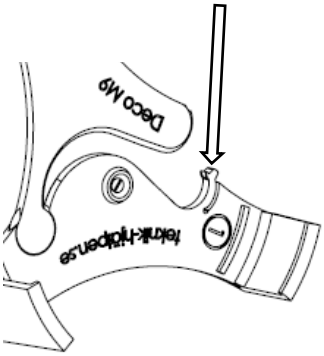

- The mount can be opened if needed by pressing the pin with a small screwdriver as shown in the picture above. Then swing out the movable locking tab.

A note from the expert

Place your Deco unit as high up on the wall as possible, the higher the better. You then get a better spread of the WiFi signal and it can reach further and to more rooms in your home.